## Transparency

1178 kbadmin June 30, 2021 Workflow 0 6519

The new Transparency feature in GstarCAD 2017 allows you specify a transparency value not only for hatch and gradient objects but also for an entire layer. Transparency effects can enhance drawings by reducing the visibility of objects that are intended for reference and is very useful for design like civil engineering drawings, land planning, etc. Besides transparency feature, hatch and gradient objects support multifunctional grips.

## Three New Options on Hatch Edit Dialog Box

Execute the HATCH command or Double-Click any hatch or gradient object on your drawing. On Hatch Edit dialog you will find three new options.

**Draw Order** : Assigns a draw order to a hatch or fill. You can place a hatch or fill behind all other objects, in front of all other objects, behind the hatch boundary, or in front of the hatch boundary.

**Layer** : Assigns new hatch objects to the specified layer, overriding the current layer. Select Use Current to use the current layer.

**Transparency** : Sets the transparency level for new hatch or fills, overriding the current object transparency. Select Use Current to use the current object transparency setting.


latch Gradient		Boundaries
Color One color Color1	Two color     Color2	Add: Pick points  Add: Select objects  Add: Select objects  Remove boundaries  Recreate boundary  Select boundary objects  Options  Annotative  Associative  Separate hatches
Orientation	Angle: 0 💌	Draw order: Do not change Layer: MOBILIARIO Transparency: Specify Value 36 Mhert Properties
Preview	ОК	Cancel Help >>

Apply Transparency from Hatch Edit Dialog Box

-Double-Click any hatch or gradient object on your drawing.

-On Hatch Edit dialog box, under Transparency title, set a transparency value and press Ok button.

-You will notice the hatch or gradient object has changed its transparency.

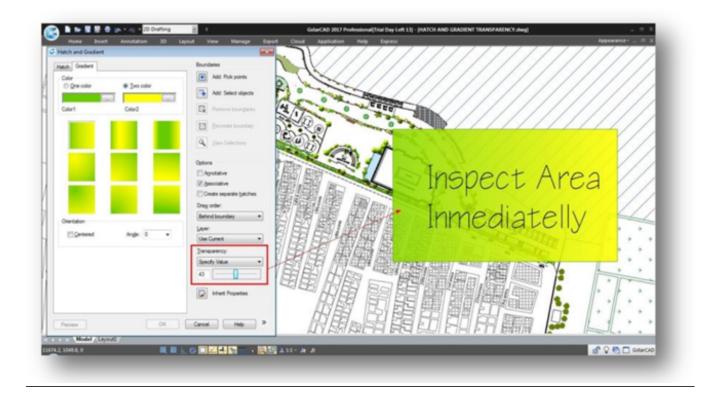

## Apply Transparency from Layer Properties Manager

You can apply transparency to any layer. The objects creates under the layer will have certain value of transparency.

-Execute LAYER command or select Layer Properties icon on the ribbon.

- On Layer Properties Manager, Click on Transparency empty cell of a layer.

-Set the transparency value, Click OK button to confirm. Then Click the Apply and OK button.

	nt layer: Lake											Search layer	0
64 >>		HX V											
"	Status	Name 🔺	On	Freeze	Lack		Linetype	Lineweight	Transparen			New viewport freeze	Description *
	~	Lake	2	-0-	Q.	160	Continuous		0	Color_160	0	23	
	4	Landscape	4	-	C.	72	Continuous		0	Color_72	0	21	
	17	L-Fum-Pirt	2	\$	-0	<b>.</b> 3	Continues	0.18 mm	0	Color_76	0	21	
	11	LINEAS	8		iệ Lay	er Transpar	rency	0.00 mm	0	Color_7	0	23	
	17	MATAS	2	000000	_			- Default	0	Color_64	0	ជនជនជនជនជនជនជនជនជ ព	
	0	MOBILIARIO	2	*	Tran	sparency val	Le(0.90) 2	0.05 mm	0	Color_84	Θ.	21	
	17	PAISAVEGSIMBOLOGIA	2	- 45	-		and a second	- Default	0	Color_7	0	21	
	10	Paseo peatonal 20	- 2	-	80			<ul> <li>Delaut</li> </ul>	0	Color_7		21	
	11	piant	0	-		OK	Cancel Help	Default	0	Color_15	8	21	
	0	piece	0	-0-		UN	Cancel Nep	Dela.A	0	Color_1	ē	91	
	0	PROYECCION MADERA	ō	ġ.		-	2	0.00 mm	0	Color_35	ā	91	
	0	SITE	ō	ō	2	<b>B</b> 15	Continuous	Default	0	Color_85	8		
	0	TECHO MADERA	ŏ	-		39	Continuous		0 4	Color_39	8	0.0	1
	0	Technal	- ö	-	20	White	Continuous		-	alor_7	a	2	
	1-2	This leves	-Ó	ŏ	100	252	Continuous		0	The second	B		_
	0	this line	0		1	White	Continuous	0.25 mm	le	day 7	a	<b>Q</b> 1	_
	10	THK LINE2	ō	00	2	0.0.0	Continuous		0	0.0.0	a	95	
	11	trazado	ŏ	÷.	2	253	Continuous	0.05.mm	0	Color_253	ē.	91	
	0	WALLS	ŏ	- a		19	Continuous	0.35.mm	0	Color_19	a	2222	
»		THE REAL PROPERTY AND A DECIMAL PROPERTY AND		~				\$.55 mm	*	0000-010			4 .
۳. J	×		_	_	_				5		_		
		and the second second								04	0.0	and Annal	No.
	Al: Shows 29 k	ayers, total 29 layers								OK.	Can	cel Apply	Heb

## Apply Transparency from Properties Slideout and Properties Palette

You can apply transparency to any object on the current drawing through the Properties Slideout.


-Click any object on your current drawing. -On Ribbon>Home Tab>Properties Panel, Click the Properties Slideout.

-You can set transparency value for by layer, by block or just input a transparency value directly.

You can also apply transparency to any object on the current drawing through the Properties palette.

-Open the Properties Palette and Click any object on your current drawing.

-You can set transparency value for the selected object.

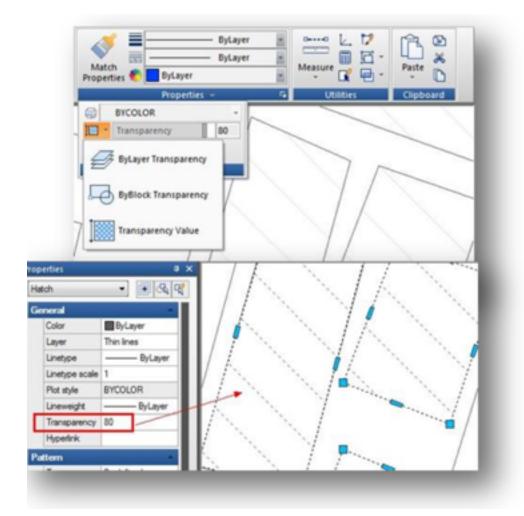

Technical Demo - Improve your drawing visualization with the new transparency feature for gradient, hatch, or layer objects as never before.