

## 3DSELECTIONMODE system variable

1309 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2501

### Function Description:

The **3DSELECTIONMODE** system variable is used to control the selection priority of both visually and physically overlapped objects in 3D visual styles.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

### System Variable Value:

**0** : apply the traditional 3D selection priority

**1**: apply line of sight 3D selection priority for selecting 3D solids and surfaces. In addition, this setting could also provide selection priority for a defined object which associated with surfaces.

Note: if selected objects are in 2d wireframe or 3d wireframe styles, the **3DSELECTIONMODE** system variable has no effect.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1309>