

# ANGBASE system variable

1317 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2633

## Function Description:

The **ANGBASE** system variable is used to set the base angle to be 0 relative to current UCS.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1317>