

# APPLYGLOBALOPACITIES system variable

1324 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 2595

## Function Description:

The **APPLYGLOBALOPACITIES** system variable is used to apply all opacity settings to global palettes.

**Type** : Parameter

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : turn opacity settings off

**1** : turn opacity settings on

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1324>