

AUTODWFPUBLISH system variable

1335 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2395

Function Description:

The **AUTODWFPUBLISH** system variable is used to control whether to create a DWF file automatically when saving or closing a DWG file.

Type : Integer

Saved in : Registry

Initial value : 0

Range : 0,1

System Variable Value:

0 :turn off automatic publishing to DWF files when saving or closing a DWG file

1 : turn on automatic publishing to DWF files when saving or closing a DWG file

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1335>