

# BACKZ system variable

1340 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2517

## Function Description:

The **BACKZ** system variable is used to set the offset value from clipping plane to target plane when saving current viewports by drawing units.

(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1340>