

## CANNOSCALE system variable

1356 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2650

### Function Description:

The **CANNOSCALE** system variable is used to set name for current annotative scale in current space.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : 1:1

Users could only input the named scales listed in scale list.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1356>