

## CELTYPE system variable

1361 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2318

### Function Description:

The **CELTYPE** system variable is used to set new object line types.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : BYLAYER

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1361>