

# CHAMMODE system variable

1369 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2334

## Function Description:

The **CHAMMODE** system variable is used to set the entry methods for CHAMFER.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : need two chamfer distances

**1** : need one chafer distance and one angle

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1369>