

CLAYER system variable

1371 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2990

Function Description:

The **CLAYER** system variable is used to set current layer.

Type : Strings

Saved in : Drawing

Initial value : 0

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1371>