

## CMATERIAL system variable

1374 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2599

### Function Description:

The **CMATERIAL** system variable is used to set material for new objects.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : BYLAYER

The valid value could be **BYLAYER**, **BYBLOCK**, and material names in drawing.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1374>