

## CMDNAMES system variable

1379 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2829

### Function Description:

The **CMDNAMES** system variable is used to display the names of active command and transparency commands.

(Read-Only)

**Type** : String

**Saved in** : Not saved

**Initial value** : ""

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1379>