

## DGNFRAME system variable

1408 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1217

### Function Description:

The **DGNFRAME** system variable is used to determine whether the frame of DGN reference underlay is visible or need to plot in current drawing.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### System Variable Value:

**0** : do not display or plot the frame of DGN reference underlay.

It will temporarily redisplay the frame when selected or previewed the selection set.

**1**: display and plot the frame of DGN reference underlay

**2** : display but do not plot the frame of DGN reference underlay

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1408>