

## DIMARCSYM system variable

1424 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1153

### Function Description:

The **DIMARCSYM** system variable is used to control the display of arc symbol in arc length dimension.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### System Variable Value:

**0** : put the arc symbol in front of dimension text

**1** : put the arc symbol above dimension text

**2** : do not display arc symbol

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1424>