

DIMCLRE system variable

1435 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1109

Function Description:

The **DIMCLRE** system variable is used to specify color for extension lines, center marks, and center lines.

Type : Integer

Saved in : Drawing

Initial value : 0

In "Select Color" dialog box, input "0" to select "**BYBLOCK**"; input "256" to select "**BYLAYER**".

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1435>