

DIMDLE system variable

1438 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1426

Function Description:

The **DIMDLE** system variable is used to set the distance the dimension line extends beyond the extension line when oblique strokes are created instead of arrowheads.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1438>