

## DIMEXE system variable

1441 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1337

### Function Description:

The **DIMEXE** system variable is used to specify the distance that the dimension line extends the extension line.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.1800(Imperial) or 1.2500(Metric)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1441>