

# DIMTFILL system variable

1445 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1206

## Function Description:

The **DIMTFILL** system variable is used to control the background of dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

## System Variable Value:

**0** : no background

**1** : background of graphic

**2** : specified by DIMTFILLCLR system variable

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1445>