

# DIMTOFL system variable

1450 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1091

## Function Description:

The **DIMTOFL** system variable is used to control whether to draw dimension line between extension lines (even if the dimension text has placed outside of extension line).

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off(Imperial) or on (Metric)

For radius dimension and diameter dimension, the text, arrowheads, and leaders could be placed outside, but the dimension line could be created internal of circles or arcs.

## System Variable Value:

**Off** : if the arrowhead placed outside of measurement points, do not create dimension line between measurement points

**On** : create dimension line between measurement points even if the arrowhead placed outside of measurement points

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1450>