

## DIMFXL system variable

1454 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1074

### Function Description:

The **DIMFXL** system variable is used to set the dimension line total length from dimension line to dimension origin.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 1.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1454>