

# DIMJOGANG system variable

1457 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1084

## Function Description:

The **DIMJOGANG** system variable is used to specify the angle of dimension line transverse part in jogged radius dimension.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 45

**Range** : 5 ~ 90

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1457>