

DIMLDRBLK system variable

1459 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1081

Function Description:

The **DIMLDRBLK** system variable is used to specify arrowhead type for leaders.

Type : Strings

Saved in : Drawing

Initial value : ""

Input a Period "." to restore the default settings(closed- filled arrowhead).

Note: the annotative block could not be used as custom arrowhead for dimension or leader.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1459>