

## DIMLFAC system variable

1460 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1169

### Function Description:

The **DIMLFAC** system variable is used to set scale factors for linear dimension measurements.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 1.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1460>