

## DIMLTEX1 system variable

1462 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1135

### Function Description:

The **DIMLTEX1** system variable is used to set the line type for the first extension line.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

The **DIMLTEX1** system variable value is "**BYLAYER**", "**BYBLOCK**", or names of line type.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1462>