

DIMLTEx2 system variable

1463 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1161

Function Description:

The **DIMLTEx2** system variable is used to set the line type for the second extension line.

Type : Strings

Saved in : Drawing

Initial value : ""

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1463>