

## DIMPOST system variable

1468 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1003

### Function Description:

The **DIMPOST** system variable is used to specify the text prefixes or suffixed (or both) for dimension measurement.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : None

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1468>