

## DIMRND system variable

1469 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 908

### Function Description:

The **DIMRND** system variable is used to round all dimension distances to be the specified value.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1469>