

## DIMTAD system variable

1477 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1194

### Function Description:

The **DIMTAD** system variable is used to control the vertical position of text relative to dimension line.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0 (Imperial) or 1( Metric)

**Range** : 0,1,2,3,4

### System Variable Value:

**0** : center the dimension text between the extension line

**1** : center the dimension text between the extension line

**2** : Places the dimension text on the side of the dimension line farthest away from the defining points

**3** : place the dimension text according to JIS

**4** : place the dimension text below the dimension line

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1477>