

DIMTSZ system variable

1482 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1169

Function Description:

The **DIMTSZ** system variable is used to specify the size of oblique strokes drawn instead of arrowheads for linear, radius, and diameter dimension.

Type : Real

Saved in : Drawing

Initial value : 0.0000

System Variable Value:

0 : draw arrowheads

>0 : draw oblique strokes instead of arrowhead. The size of oblique strokes is control by **DIMTSZ** system variable multiplied by the value of **DIMSCALE** system variable.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1482>