

## DIMTXSTY system variable

1484 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1019

### Function Description:

The **DIMTXSTY** system variable is used to specify the dimension text styles.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Standard

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1484>