

# DIMUNIT system variable

1488 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1340

## Function Description:

The **DIMUNIT** system variable is used to set the dimension format.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 2

**Range** : 1 ~ 8

## System Variable Value:

1 : scientific

2 : scientific

3 : engineering

4 : architectural -stack

5 : fractional-stack

6 : architectural

7 : fractional

8 : Microsoft Windows Desktop

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1488>