

# DIMUPT system variable

1489 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1163

## Function Description:

The **DIMUPT** system variable is used to control options for user-positioned text.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

## System Variable Value:

**Off** : cursor only controls the dimension line position

**On** : cursor only controls the dimension line position

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1489>