

DISTANCE system variable

1492 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1315

Function Description:

The **DISTANCE** system variable is used to store the distance calculated by DIST command.
(Read-Only)

Type : Real

Saved in : Not saved

Initial value : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1492>