

## DWFOSNAP system variable

1522 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1388

### Function Description:

The **DWFOSNAP** system variable is used to control whether to active object snap mode for geometric drawing in attached DWF or DWFx reference underlay.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

### System Variable Value:

**0** : disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

**1** : disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1522>