

DWGCODEPAGE system variable

1524 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1171

Function Description:

The **DWGCODEPAGE** system variable is used to store the same value as the **SYSCODEPAGE** system variable for compatibility.

(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1524>