

DWGPREFIX system variable

1526 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1030

Function Description:

The **DWGPREFIX** system variable is used to store the drawing driver and folder prefix.
(Ready-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1526>