

# DYNPROMPT system variable

1536 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1341

## Function Description:

The **DYNPROMPT** system variable is used to control the display of prompts in dynamic input.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

0 :Off

1 : On

The **DYNMODE** system variable turns dynamic input on and off. If specified **DYNMODE** to be 0, it does not display prompts no matter how to set the **DYNPROMPT** system variable.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1536>