

ELEVATION system variable

1539 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1035

Function Description:

The **ELEVATION** system variable is used to store the elevation in current UCS for new objects.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1539>