

EXPLMODE system variable

1544 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1030

Function Description:

The **EXPLMODE** system variable is used to control whether the EXPLODE command supports non-uniformly scaled blocks.

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not explode non-uniformly scaled blocks

1 : explode non-uniformly scaled blocks

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1544>