

FACETERMAXGRID system variable

1556 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1092

Function Description:

The **FACETERMAXGRID** system variable is used to set internal parameter.

Type : Integer

Saved in : User-settings

Initial value : 4096

Range : 0 ~ 4096

Note: this system variable reflects the absolute value of objects whose smoothness is zero.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1556>