

# FACETERMINVGRID system variable

1559 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1133

## Function Description:

The **FACETERMINVGRID** system variable is used to set internal parameters.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 0

**Range** : 0 ~ 1023

The value of **FACETERMINUGRID** could not be larger than **FACETERMAXGRID**.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1559>