

# GFSHIFT system variable

1583 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1097

## Function Description:

The **GFSHIFT** system variable is used to specify the justification of gradient fill pattern, center, top or left shifted.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** :center

**1** :shift up and left

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1583>