

# GRIDMAJOR system variable

1586 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1019

## Function Description:

The **GRIDMAJOR** system variable is used to set the frequency of major grid lines compared to minor grid lines.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 5

**Range** : 1 ~ 100

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1586>