

# HIDETEXT system variable

1609 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1054

## Function Description:

The **HIDETEXT** system variable is used to specify whether to deal with text objects created by TEXT or MTEXT command when executing HIDE command.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : on

## System Variable Value:

**On** : do not hide text and other objects

**Off** : hide text but display other objects

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1609>