

# HPASSOC system variable

1612 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1146

## Function Description:

The **HPASSOC** system variable is used to control whether the hatch pattern and fill are associative or not.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : the hatch pattern and fill have no association with defined boundary objects.

**1** : the hatch pattern and fill have association with defined boundary objects and update with boundary objects.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1612>