

# HPBOUND system variable

1614 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1096

## Function Description:

The **HPBOUND** system variable is used to control types of objects created by HATCH and BOUNDARY commands.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : create regions

**1** : create polylines

It will create polylines when the HPBOUNDRETAIN system variable is on.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1614>