

# HPDOUBLE system variable

1617 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1222

## Function Description:

The **HPDOUBLE** system variable is used to specify double hatch patterns for custom defined patterns.

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

The double hatch pattern specifies a second set of lines drawn at 90 degrees with original line.

## System Variable Value:

**0** : turn off double hatch pattern

**1** : turn on double hatch pattern

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1617>