

# IMAGEFRAME system variable

1630 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1236

## Function Description:

The **IMAGEFRAME** system variable is used to control whether to display and plot image and map frames.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1,2

## System Variable Value:

**0** : do not display and plot image frame

It may temporarily display the frame when previewing selection or selecting objects

**1** : display and plot image frames

**2** : display but do not plot image frames

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1630>