

# IMPLIEDFACE system variable

1632 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1198

## Function Description:

The **IMPLIEDFACE** system variable is used to control the detection of implied faces.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : implied faces could not be detected

**1** : implied faces could be detected

The implied face is a closed region, it could be created by intersected overlapped faces of 3D solids. This variable must be set to 1 if you want to select and modify implied faces.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1632>