

INSNAME system variable

1637 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1176

Function Description:

The **INSNAME** system variable is used to set the default block name for INSERT command.

Type : Strings

Saved in : Not saved

Initial value : ""

This name should qualify symbol name rules. If no default value for the **INSNAME** system variable, it returns "". Inputting a period "." to specify no default value.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1637>